



Installation Guide

SkyMate I1000



SkyMate, Inc.

11890 Sunrise Valley Drive Suite 100

Reston, VA 20191 USA

Phone: 703-961-5800

Toll Free: 866-skymate

Fax: 703-814-858

www.SkyMate.com

Parts Included

When unpacking your system make reference of your SCID on the bottom of your SkyMate Communicator
You will need this to activate your SkyMate.

1) SkyMate I Series Communicator

2) Power Cable


3) Y-Cable

4) SOS Pad

5) Iridium/GPS Antenna


6) 20 foot Antenna Cable

7) SMA to SMA pigtail

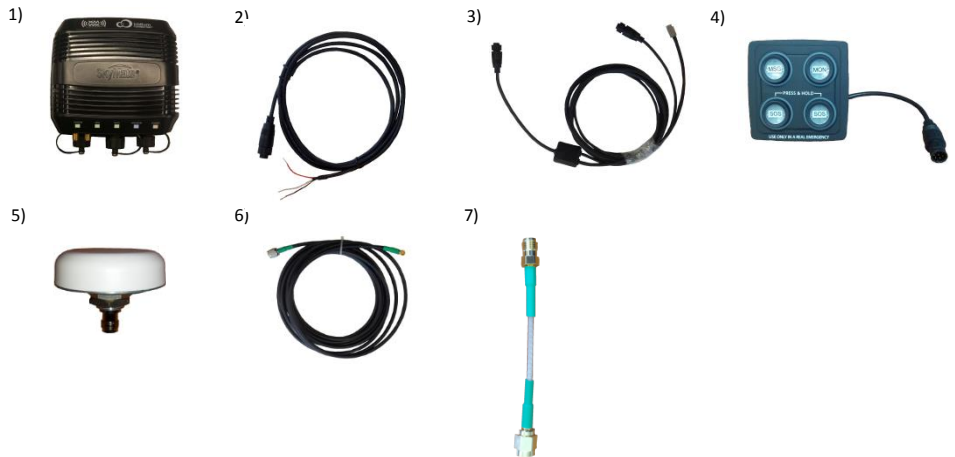

Hardware Installation

1. Select a location for your SkyMate communicator
 - Your SkyMate communicator should be installed in a dry, well-ventilated area close to a power source.
2. Select a location for your Iridium/GPS antenna
 - The antenna must be installed within 20 feet of your SkyMate communicator
 - The antenna must have a clear view of the sky
3. Install SOS pad into dash
4. Connect to power (12v to 24v)
 - Red to positive
 - Black to negative
 - White to shield. If not shield then white can also be connected to negative

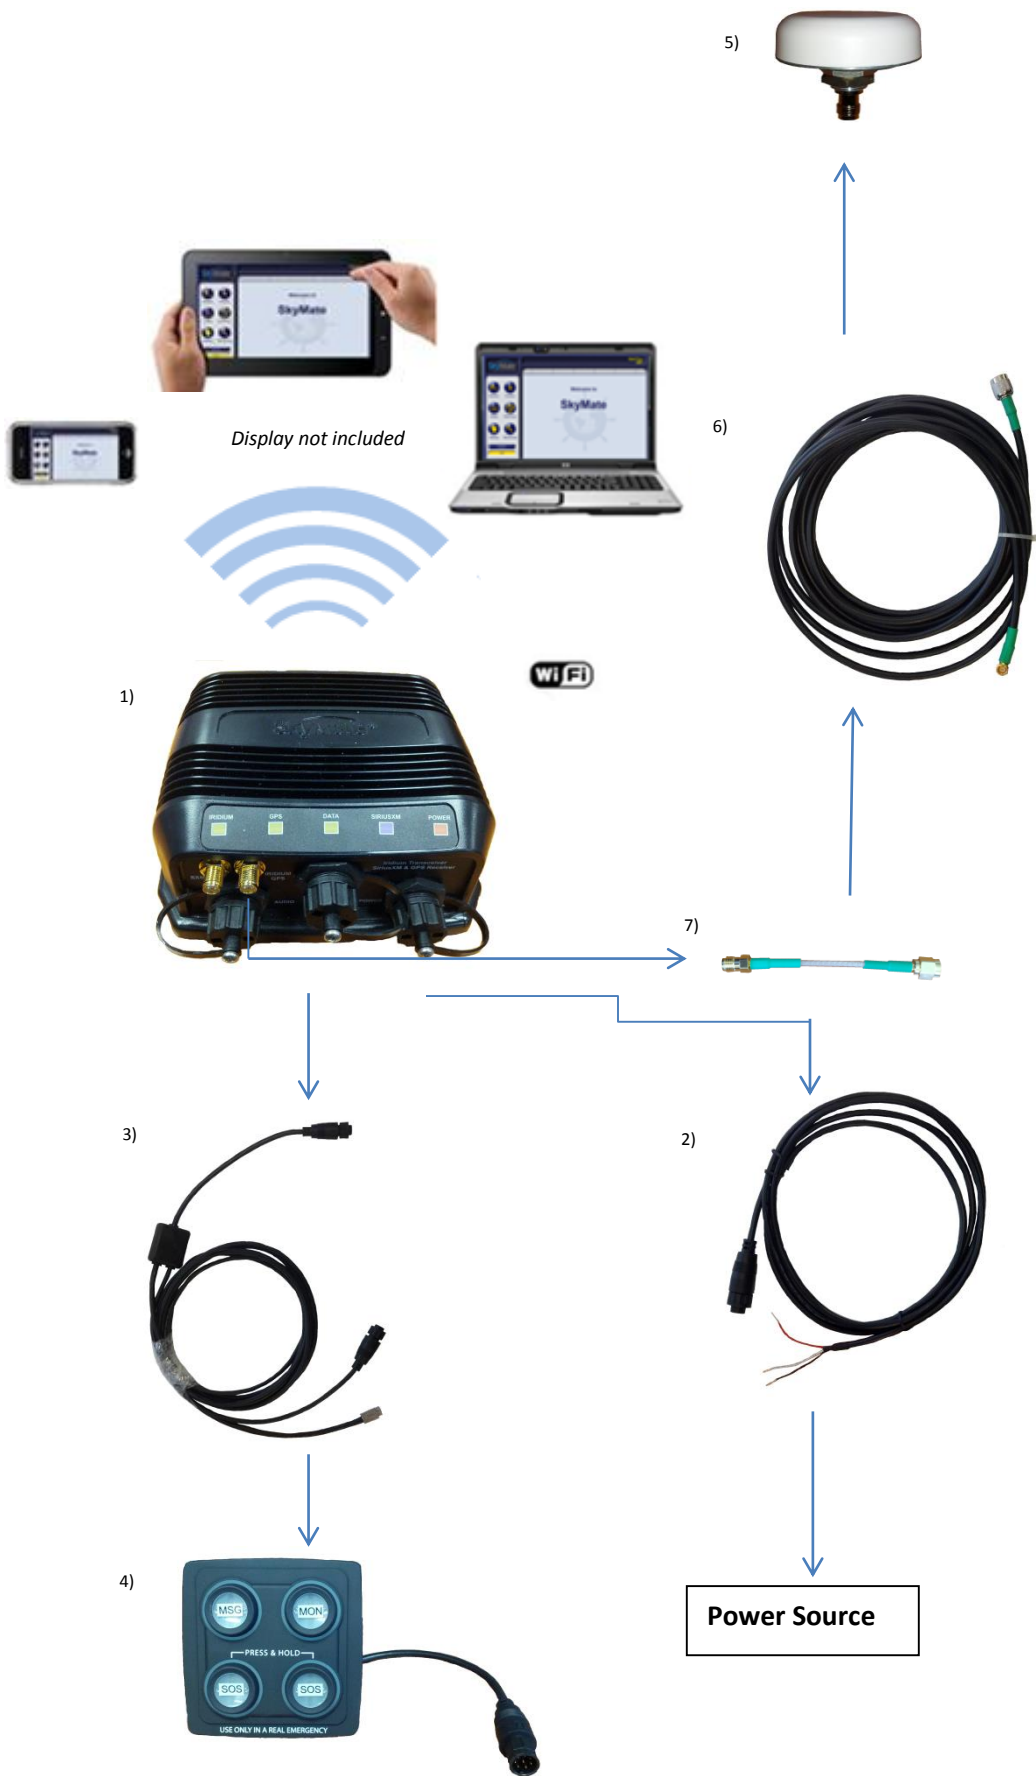

Activating SkyMate Communicator (Internet connection required)



[ACTIVATE](#) | [NEWS](#) | [BLOGS](#) | [CONTACT US](#) | [JOIN OUR MAILING LIST](#)

[LOG IN](#) | [SUBSCRIBERS](#) | [DEALERS](#)



CHOOSE YOUR INTEREST

[RECREATIONAL](#) • [SPORT FISHING](#) • [COMMERCIAL FISHING](#) • [WORKBOAT/FLEETS](#)

[PRODUCTS](#) | [SERVICES](#) | [COVERAGE MAP](#) | [HOW IT WORKS](#) | [SERVICE PLANS](#) | [HOW TO BUY](#) | [FAQ'S](#) | [SOFTWARE DEMO](#) | [DOWNLOADS](#)

Visit www.skymate.com and click activate in the top right corner or call SkyMate Support at 703-961-5800 or toll free 866-SkyMate

Connecting to SkyMate

Wi-Fi

1. Connect your device to the SkyMate WiFi network
2. Open your preferred browser
3. In the URL bar go to www.skymatewifi.com
4. Default password is *ndr*

Ethernet Cable

1. Connect Ethernet cable to device
2. Open your preferred browser
3. In the URL bar type 169.254.57.96
4. Default password is *ndr*