

I 1500 VMS Instructions

Read before proceeding with installation:

- Check that all parts are in the box.
- Activate your communicator online at skymate.com/activation.
- Place Iridium/GPS antenna so that the top of the white cone points to the sky.
- Position the antenna as far as possible from radiating sources.
ie. Radar, transmitting antennas, and metal structures obstructing the antennas view of the sky.
- Apply a small amount of thread locker(blue tube) to the threads of the gold antenna connector (just above the nut) before the pigtail/antenna cable is connected.
- The thick iridium antenna cable can connect directly to the RF connector on the I 1500 but for ease of installation, the flexible pigtail included can be used.
- The power cable should be connected directly to the battery. If this is not possible it should be connected to the fuse panel (to a breaker). The power cable includes a red wire that connects to the positive terminal and two black wires that connect to the negative terminal of the battery.
- Ensure the power cable is connected to the power socket and the data cable to the data socket.
- The cables should be clamped down to objects that prevent vibration.
- The system will boot up 30 seconds after power is provided.

